Excess Surge Check Valves

Excess surge check valves are used to eliminate loss of pressure due to a sudden surge or opening of a pressure component in a pressurized system (such as a breakage of a gauge or test component). These check valves should be mounted in the vertical position. Only one basic size is available (60-41HF9-E) with adapters readily available to convert to other size connections. Standard tubing glands and collars are provided unless otherwise specified.

FLOW>

Catalog No.	psi	Connections	Length	Hex
60-41HF9-E	60,000	9/16 HIGH PRESSURE	3¹/8″	1 1/2″